
Please read the following instructions and warnings carefully.

BABY CHAIR

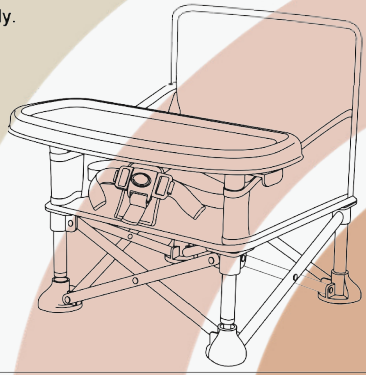

Age：6~36 months

Maximum weight recommendation：15kgs

Assembled size：38cm*35cm*37cm

Material：Metal/plastic/0xford cloth

INSTRUCTION MANUAL


Components




Travel Bag



Tray

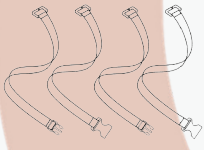


Chair Straps





Seat


Assembly

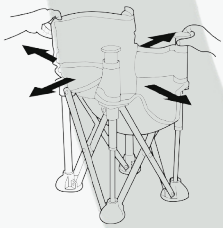

Pull open

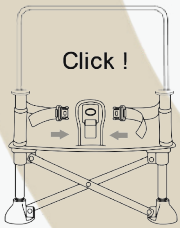




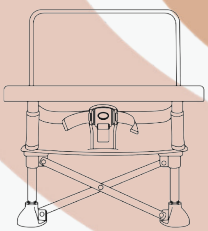


WARNING !
Prevent serious injury or death from falls or sliding out.Always use restraint system.


Tray Installation

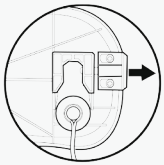

1.Squeeze levers on tray

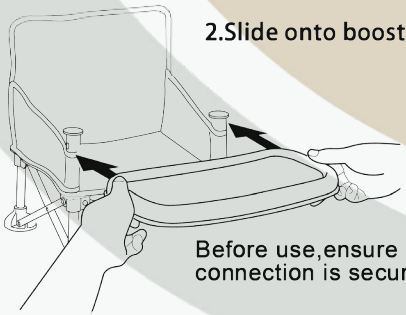


2.Slide onto booster

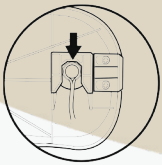

FINISHED!


Before use,ensure that the tray connection is secure.

Securing booster to chair

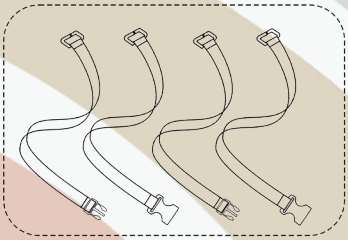


Remove both sets of chair straps.


Slide strap through buckle.

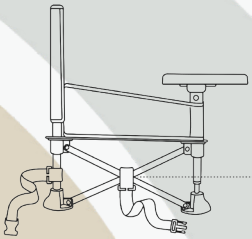


Attach one strap to rear leg and one strap to cross bars on booster's side.

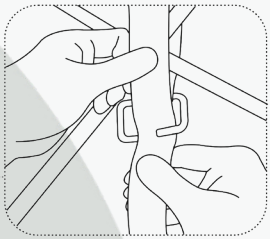


Repeat with two remaining straps on opposite side of chair.

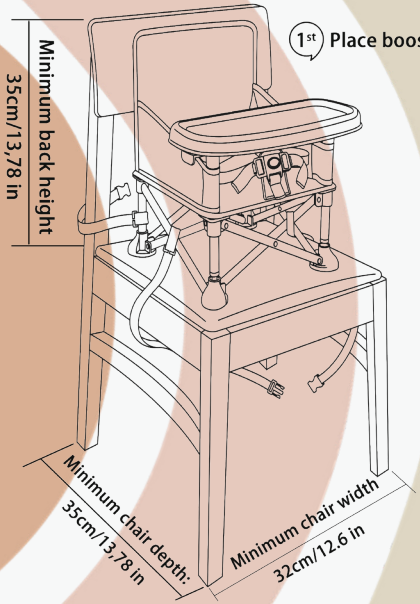


1st Place booster on chair.

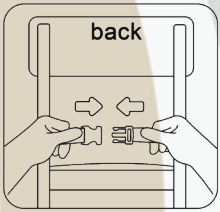

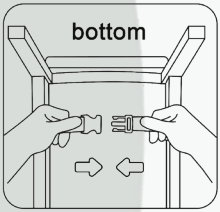

2nd Fasten clips around chair back and underneath chair seat.

3rd Be sure to tighten straps.

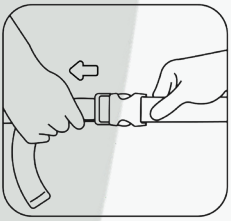

The length of the streps on both sides of the booster pad for children's dining chair is 45CM. The booster pad is suitable for the addition of the width of the chair surface and the thickness of the chair surface less than 60CM,and the addition of the width and thickness of the chair backrest less than 60CM.

cleaning and maintenance

Before each use,inspect the product for damaged hardware, loose joints,missing parts,or sharp edges.

Do not use product if any parts are missing, torn,or broken.

To clean product seat and chair straps:Wipe clean with a damp cloth or sponge using mild soap and clean warm water. Towel or air dry.

Tray:Dishwasher safe,top rack only.